

 


YOYO Cam[®]

QUICK START GUIDE

YOYOCam 4G/WiFi Indoor


Easy-to-install camera for indoor surveillance. Wireless connection via WiFi or 4G.

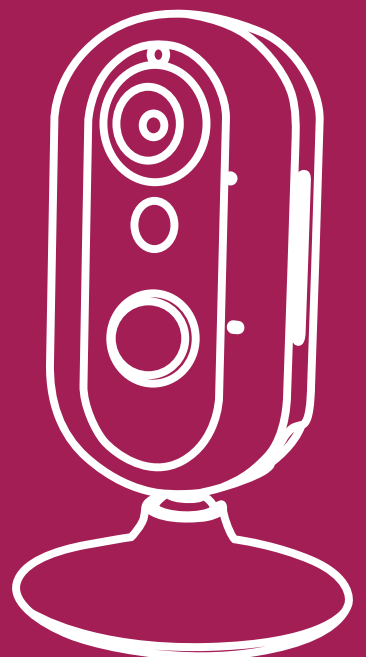


yoyomotion.com

v. 1.2

 
Get to know your YOYOCam 4G/WiFi Indoor

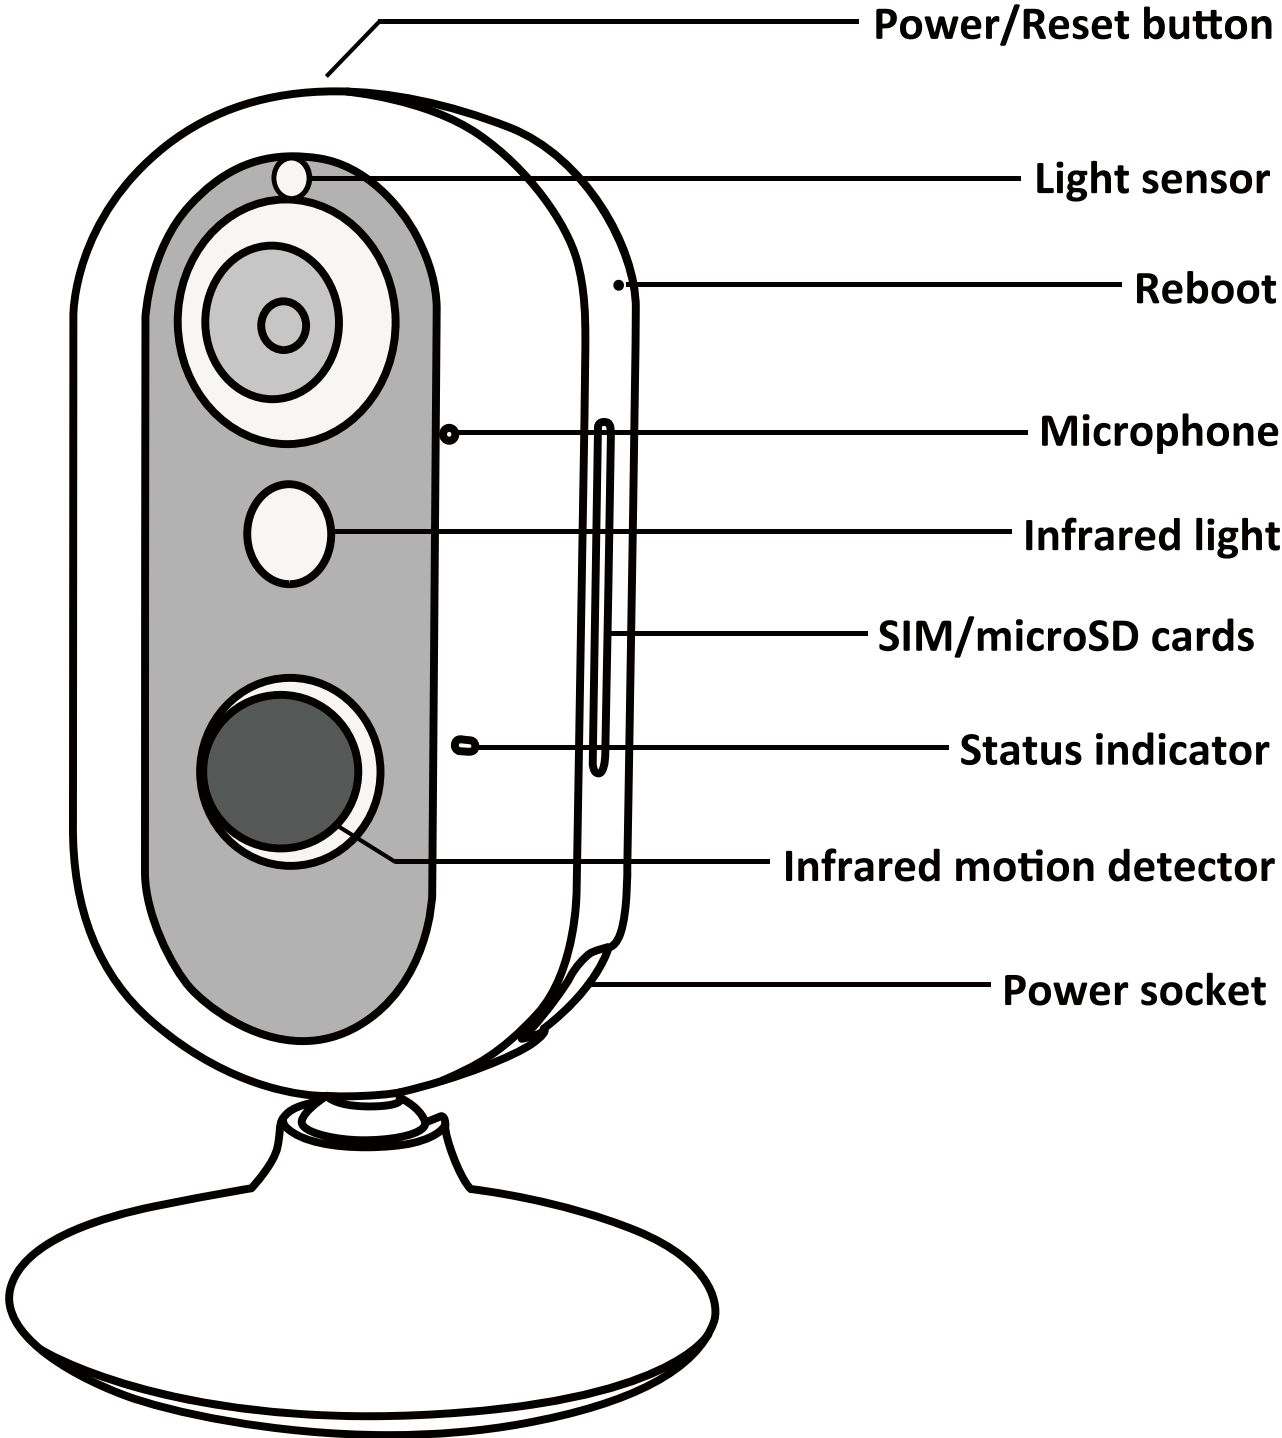


Kit content

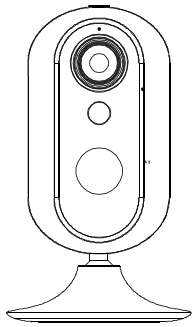 

Alarm camera

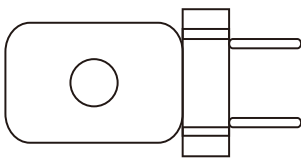 

Power adaptor

 


Power cable




Ejector pin



  Screw with plug

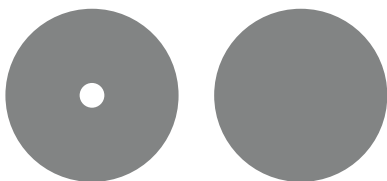



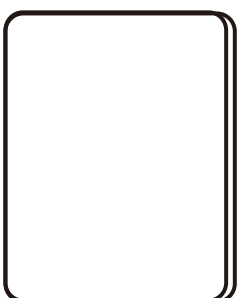










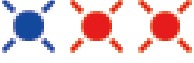

Magnetic plate and adhesive pad for wall mounting



User documentation

Status indicator

LED indicator	Status
	YOYOCam is off
	Start-up in progress
	Turning off...
	No Internet connection
	Internet available over 4G/3G
	Internet available over WiFi
	Viewing in progress over WiFi
	Viewing in progress over 4G/3G
	Recording in progress over WiFi
	Recording in progress over 4G/3G
	Recording and viewing in progress over WiFi
	Recording and viewing in progress over 4G/3G
	Firmware update in progress
	Connecting to WiFi
	Battery level is low

Mount YOYOCam 4G/WiFi Indoor

YOYOCam has a built-in stand which is jointed, allowing it to be tilted and swivelled in any direction when placed on a table, a shelf or when mounted on the wall or in the ceiling.

Use the included magnetic plate to mount YOYOCam on the wall or in the ceiling. Fix the magnetic plate to any surface by using the included adhesive pad or screw. Metal surfaces do not require adhesive pad nor screw to fix the magnetic plate.

Note: From the Yoyomotion Home App the video of YOYOCam can be turned upside down in case YOYOCam is mounted in the ceiling.

Insert SIM and microSD cards

4G/3G connection requires a valid SIM card (micro format) with the PIN lock disabled.

Local alarm recordings in YOYOcam requires a microSD card (max 32 GB).

Install SIM and microSD card like this:

- 1. Eject the combined SIM and microSD card tray using the included ejector pin.**
- 2. Place the SIM and/or microSD card onto the tray.**
- 3. Reinsert the tray into the SIM and microSD card slot.**

Note: If YOYOcam is connected over WiFi then a SIM card is optional but serves as back-up connection if inserted.

Note: Local alarm recording to microSD is not limited to 30 days as alarm recording to cloud storage is. Local alarm recording also reduces online traffic from YOYOcam.

Connect power

To power the device:

- 1. The power cable has two connectors. Insert the smaller one into the power socket of YOYOCam and the larger one into the USB socket of the power adaptor.**
- 2. Plug in the power adaptor into an electric power outlet.**
- 3. Press and hold the power button of YOYOCam for 3 seconds. Wait for red status indicator.**

When YOYOCam starts up with an installed SIM card the status indicator will flash slowly in yellow. Without an installed SIM the status indicator will be steady yellow.

Install Yoyomotion Home app

Search for 'Yoyomotion Home' in App Store or Google Play.



Download the Yoyomotion Home app to your phone to set up and manage your YOYOCam 4G/WiFi Indoor.



Open the app and login to or register a Yoyomotion Home account by filling in a valid e-mail address and password.

Upon registration an e-mail will be sent to the registered e-mail address with instructions to confirm its validity.

Once confirmed you can login to your Yoyomotion Home app.



Add a new device to Yoyomotion Home

Tap on + in the upper right corner of the Start page of your Yoyomotion Home app.

Scan the QR code or type in the UID of your device.

The device's UID and QR code are located on the back of the device and on the label of the packaging.



Setup 4G and WiFi connections

When YOYOCam starts with a mounted SIM a connection to the mobile network is established. During this process you may hear "Waiting for connection" once from the device. If the process is quick you will not hear anything.

 
▶▶ Tap on the button **Connect device to 3G/4G** in the app

YOYOCam can later be configured to also connect to WiFi. Go to **Settings** and **Device connections**.

When YOYOCam starts without a working SIM card you will hear "Waiting for connection" from the device about every 20:e seconds

▶▶ Tap on the buHon **Connect device to WiFi** in the app

YOYOCam can later be configured to also connect to 3G/4G. Insert a working SIM card and go to **Settings** and **Device connecCons**.

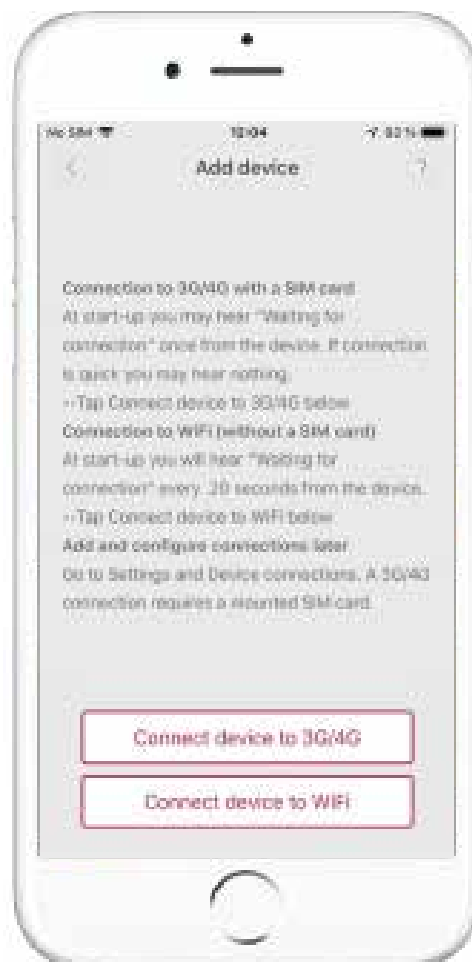

App symbols – Start page

Setting



Device settings - got to menu



Alarm - activate/deactivate



Push notifications - activate/deactivate



Share device with others - got to menu

Status



Audio alarm - ON/OFF



Motion alarm - ON/OFF



MicroSD card - installed



Private mode (camera and recording) - ON/OFF



Mobile WiFi Hotspot - ON/OFF

App symbols – Live page



Select image quality



Loudspeaker on/off



Record video



Microphone on/off



Snapshot (still image)



Full screen image

Technical specifications

Communication	4G/3G and WiFi 2.4 GHz
Image resolution	HD720p (1 Mpx)
Image angle	120°
Night vision	IR motion detection and built-in IR light, up to 5 meters
Memory card	MicroSD card up to 32 GB (not included)
SIM card (size)	Micro SIM 15x12 mm (not included)
Cloud storage	30 days free storage of alarm recordings
Motion detection	Built-in infrared sensor (PIR), up to 5 meters
Audio detection	Built-in microphone with alarm function
Two-way audio	Built-in microphone and speaker
Mobile WiFi Hotspot	4G/3G connection can be shared with other WiFi devices
Backup battery	450 mAh, low battery and power failure alarm
Antennas	Built-in 4G/3G and WiFi
Climate	Intended for indoor use
Power consumption	< 5 W
Power supply	5 V, 2 A
Size	54x30x94 mm (stand ø70 x 25 mm)
Weight	140 grams

Important information

Read the terms and conditions for your SIM card and mobile operator service.

When inserting or removing the SIM card, do not touch the gold connectors and keep YOYOCam powered off.

Use only the original YOYOCam 4G/WiFi Indoor power adaptor. Treat your YOYOCam carefully. Store it safely and do not drop or throw it.

Do not expose your YOYOCam to dust, liquid, moisture or humidity. Do not use or store your YOYOCam at extreme high or low temperatures.

Do not use your YOYOCam in aircraft or any other places where use of radio transmitters is prohibited.

Do not attempt to take your YOYOCam apart. There are no user serviceable components inside.

Do not allow children to play with your YOYOCam. Small parts such as SIM cards could represent a choking hazard.

For optimal performance do not cover your YOYOCam, position it with good access to the wireless signal.

Battery performance depends on signal strength, temperature, usage pattern and other factors.

 
Do not dispose of your YOYOCam with normal household waste. Dispose of your YOYOCam at an appropriate collection point for electronic equipment.

More information

For more information and useful advice for your YOYOCam, see also the below section in the app:

Information

Learn more about your products

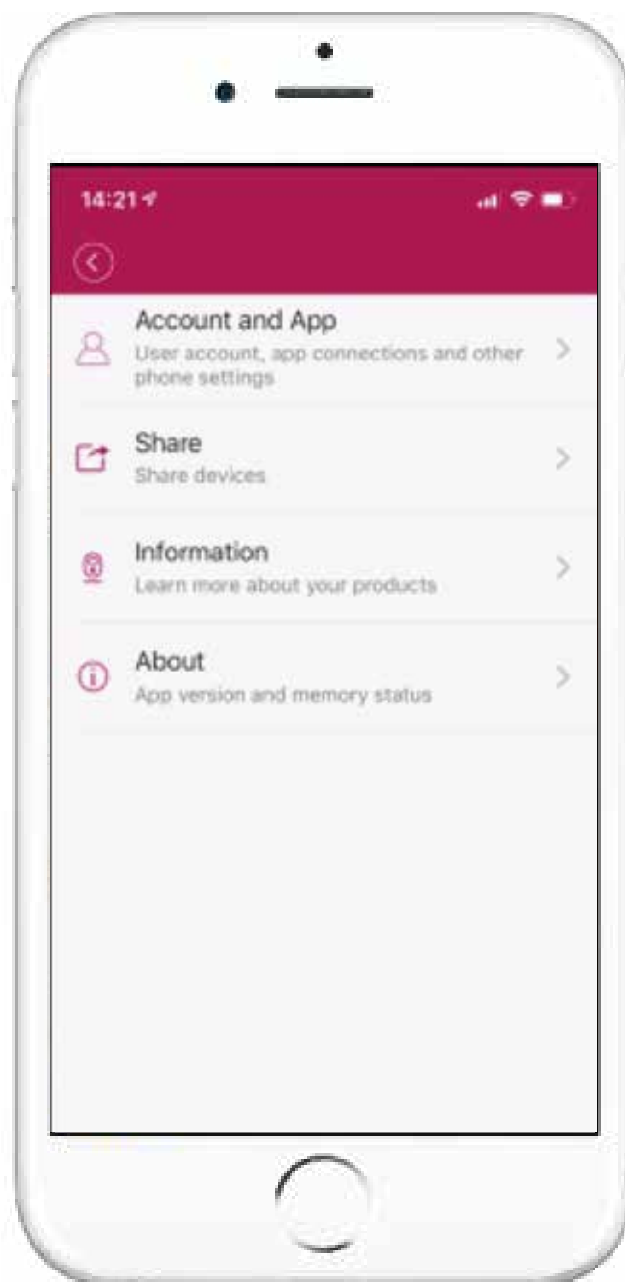

**©Copyright January 2020 Yoyomotion AB. All rights reserved.
App Store and Google Play are the trademarks of Apple Inc and Google.
All other trademarks are the property of their respective owners.**

www.yoyomotion.com

